

PERIPHERALS

<For machine spindle and holder bores> Cleaning tool
SPINDLE CLEANER

- Completely removes oil and particles from machine spindle and holder bore!

[For ISO Taper Spindle]



Model	Taper
SC20	BBT/BT20 (NT20)
SC30	BBT/BT30 (NT30)
SC40	BBT/BT40 (NT40)
SC45	BBT/BT45 (NT45)
SC50	BBT/BT50 (NT50)

[For Morse Taper Spindle]



Model	Taper
SC1	MT1
SC2	MT2
SC3	MT3
SC4	MT4
SC5	MT5
SC6	MT6

1. Also available for the bore of Morse taper holders.

[For HSK Spindle]



A Type

Model	Spindle
SC-HSK 32	HSK-A 32
40	HSK-A 40
50	HSK-A 50
63	HSK-A 63
80	HSK-A 80
100	HSK-A100
125	HSK-A125

E Type


Model	Spindle
SC-HSK25E	HSK-E 25
32E	HSK-E 32
40E	HSK-E 40
50E	HSK-E 50

F Type

Model	Spindle
SC-HSK63F	HSK-F 63

<For machine spindle and flange face> Cleaning tool
BIG CAPTO SPINDLE CLEANER

- Cleans both internal taper and flange face of the machine spindle simultaneously with simple inserting and rotating motions.

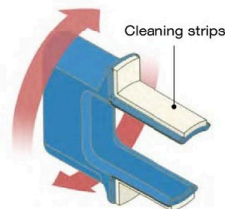

Model
SC-C3
-C4
-C5
-C6
-C8

H

PERIPHERALS

