

# PERIPHERALS


## Tightening Fixture for Collet Chucks with Torque Indicator TORQUE FIT

Get your collet chuck tightening right!

- Notification by buzzer near the correct torque value.
- Torque values of all the **BIG** BIG DAIHOSHA-made collet chucks are preset.



Collet Chuck exclusive

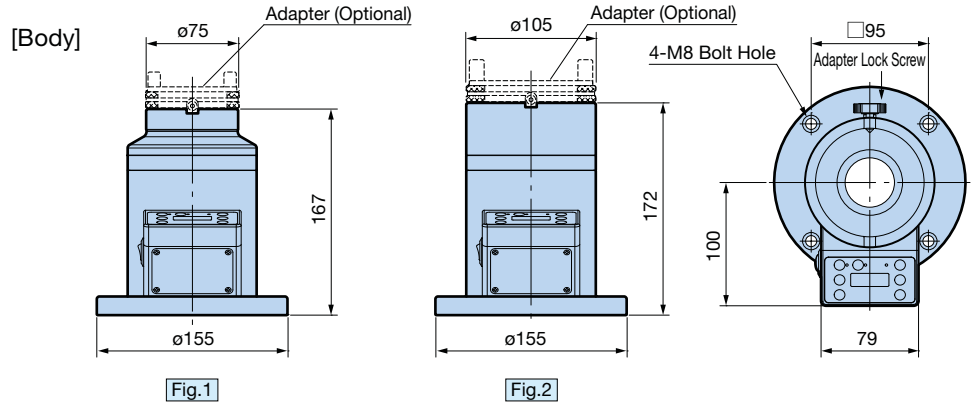

[ For BBT / BT ] adapter sold separately

Model	Fig.	Taper No.	Compatible adapter model
TF-40	1	30	TMA40-30
		40	-40
TF-50	2	40	TMA50-40
		50	-50

1. Cap bolts (4 pcs) for mounting on a workbench or surface plate are not included.


[ For HSK / BIG CAPTO ] adapter sold separately

Model	Fig.	HSK No.	BIG CAPTO No.	Compatible adapter model
TF-40	1	32	C3※	TMA40- 32R
		40	C4※	- 40R
		50	C5※	- 50R
		63	C6※	- 63R
TF-50	2	63	C6※	TMA50- 63R
		80	C8※	- 80R
		100	-	-100R

1. Cap bolts (4 pcs) for mounting on a workbench or surface plate are not included.  
2. BIG genuine BIG CAPTO C3 - C8 shanks only can be clamped.

### ● Example

Adapter is sold separately.  
Please order together with the model.

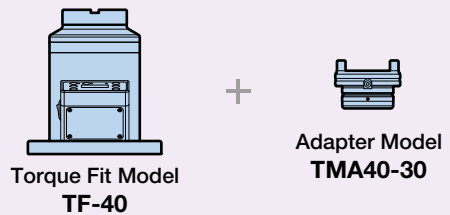

- Use only after turning on the power supply, since use without power can lead to malfunctions.
- Use after securely fixing to a workbench or surface plate.
- **Dedicated for Collet Chuck use, so cannot be used with Milling Chucks, etc.**

Compatible holders are the BIG-made "MEGA MICRO CHUCK", "MEGA NEW BABY CHUCK", "MEGA E CHUCK", "NEW BABY CHUCK" and "MEGA SYNCHRO TAPPING HOLDER".

Torque setting range		4 - 80N·m
Minimum read value		0.01N·m at 10N·m or less 0.1N·m at 10N·m or more
Display	Setting display screen	Chuck model Chuck size
	Torque value display screen LED	Torque value Setting torque Bar graph Peak hold Buzzer Error
Basic functions		Peak hold Buzzer Error display
Power supply		100 - 240V
Ambient operating temperature		0 - 40° with no condensation
Standard accessory		Adapter Lock Screw AC Adapter
Weight (kg)		8 (For both TF-40 and TF-50)